

DEPARTMENT OF PUBLIC HEALTH AND ENVIRONMENT GOVERNMENT CENTER

14949 62nd STREET NORTH P.O. BOX 6 STILLWATER, MN 55082-0006 Office: 651-430-6655 TDD: 651-430-6246 FAX: 651-430-6730

SSTS MAINTENANCE REPORT

System Location System Location	
Address 289 Quant Are V	Telephone Number
	e MW ZIP 55043 Property ID No./GEO Code
0 0 1 1 1	pping Date 10/26/15
	Contractor
Maintainer MEYER SEWER MPC	A License No. 915 Telephone Number 651-459-016
What was done to the system?	Report Liquid Capacity in Gallons
Tank(s) Pumped	Tank 1: 1200 2 Pumped Tank 2: Pumper
Sludge and scum measured. Do tanks need to be pumped?	Tank 3: Pumped Tank 4: Pumped
Yes No (If no provide measurements below)	Total Gallons Pumped: V200
Visual Inspection (note any problems with the system	m): NOTE: This does not serve as a compliance inspection
	07 CO 16 NAL
	·
	PUBLIC HEALTH
*Toul Management	U-O-I-KT(/\WNOTD
	-Use Only If Tank(s) Were NOT Pumped
Tank Length in. X Tank Width in.)	(Tank Depth in. = Tank Volume (cubic inches)
Tank Radius in. X Tank Radius in.)	(3.14 = Tank Volume (cubic inches)
Tank Volume (cu. in.) / 231.01 = Liquid C	• • • • • • • • • • • • • • • • • • •
	apacity Gallons / Tank Depth in. = Gallons/Inch
Sludge Level in. X Gallons Per Inch =	apacity Gallons / Tank Depth in. = Gallons/Inch Sludge Volume Gallons
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch =	Gallons / Tank Depth in. = Gallons/Inch Sludge Volume Gallons Scum Volume Gallons
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch =	apacity Gallons / Tank Depth in. = Gallons/Inch Sludge Volume Gallons
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch =	apacity Gallons / Tank Depth in. = Gallons / Inch Sludge Volume Gallons Scum Volume Gallons Total Sludge and Scum Volume Gallons
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch = Sludge Volume + Scum Volume =	Gallons / Tank Depth in. = Gallons/Inch Sludge Volume Gallons Scum Volume Gallons Total Sludge and Scum Volume Gallons apacity = Percent Sludge and Scum in Tank %
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch = Sludge Volume + Scum Volume =	Sludge Volume Gallons Gallons Scum Volume Gallons Total Sludge and Scum Volume Gallons apacity Formula Sludge and Scum Volume "Tanks must be pumped if either of the following conditions exist:
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch = Sludge Volume + Scum Volume =	Sludge Volume Gallons Scum Volume Gallons Total Sludge and Scum Volume Gallons *Tanks must be pumped if either of the following conditions exist: 1. The top of the sludge layer is less than 12 inches from the bottom of the outlet
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch = Sludge Volume + Scum Volume = Total Sludge and Scum Volume / Liquid Ca	apacity Gallons / Tank Depth in. = Gallons/Inch Sludge Volume Gallons Total Sludge and Scum Volume Gallons apacity = Percent Sludge and Scum in Tank % *Tanks must be pumped if either of the following conditions exist: 1. The top of the sludge layer is less than 12 inches from the bottom of the outlet baffle; or Tank Depth measured 3. Total sludge and scum volume is greater
Sludge Level in. X Gallons Per Inch = Scum Level in. X Gallons Per Inch = Sludge Volume + Scum Volume = Total Sludge and Scum Volume / Liquid Ca	Sludge Volume Gallons Scum Volume Gallons Total Sludge and Scum Volume Gallons *Tanks must be pumped if either of the following conditions exist: 1. The top of the sludge layer is less than 12 inches from the bottom of the outlet bafflor or